


IMPORTANT Safety, Warning and Suggestions


1. Qualified electrician is required to install this product/s.
2. Please read instructions carefully before installation.
3. All wiring and installations should meet local, state and national electrical codes.
4. Install correct lamp type and wattage.

Stem Mount with STC Canopy

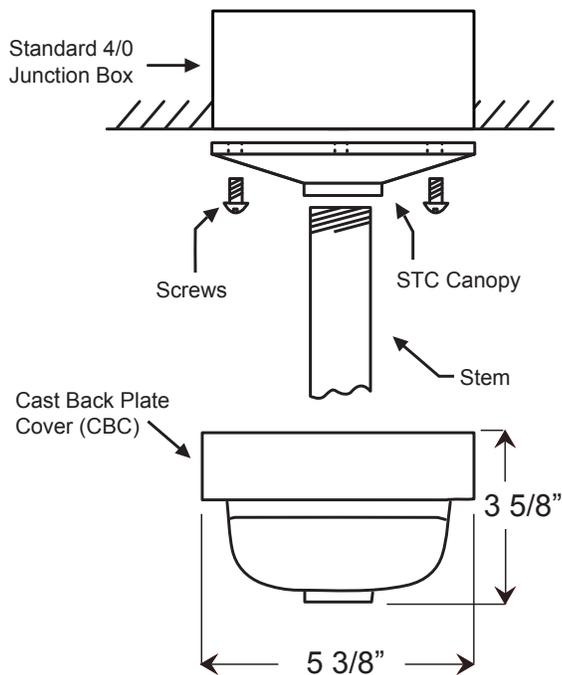

1. Prior to installation, disconnect power at main electrical box.
2. Verify that lead wires from shade are long enough for stem (A) provided.
3. Feed lead wires through stem and thread shade onto stem.
4. If Cast Back Plate Cover (CBC) is provided, slide over stem (A).
5. Screw Stem into STC Canopy (B).
6. Make wiring connections according to national and local codes.
7. Attach Flat Ceiling Stem Canopy with stem assembly to Junction box with screws (C) provided.
8. If provided, place CBC over Flat Ceiling Stem Canopy (B) and tighten set screw.

Stem Mount with RTC

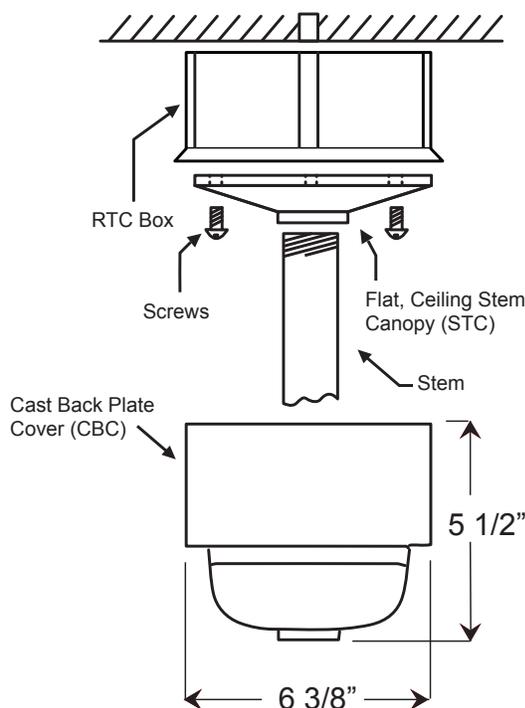

1. Prior to installation, disconnect power at main electrical box.
2. Verify that lead wires from shade are long enough for stem (A) provided.
3. Feed lead wires through stem and thread shade onto stem.
4. If RTC Spun Cover (RTC) is provided, slide over stem (A).
5. Screw arm into Flat Ceiling Stem Canopy (STC) (B).
6. Make wiring connections according to national and local codes.
7. Attach RTC cover plate with stem assembly to RTC box with screws (D) provided.
8. If provided, place RTC Spun Cover over Flat Ceiling Stem Canopy (B) and tighten set screw.